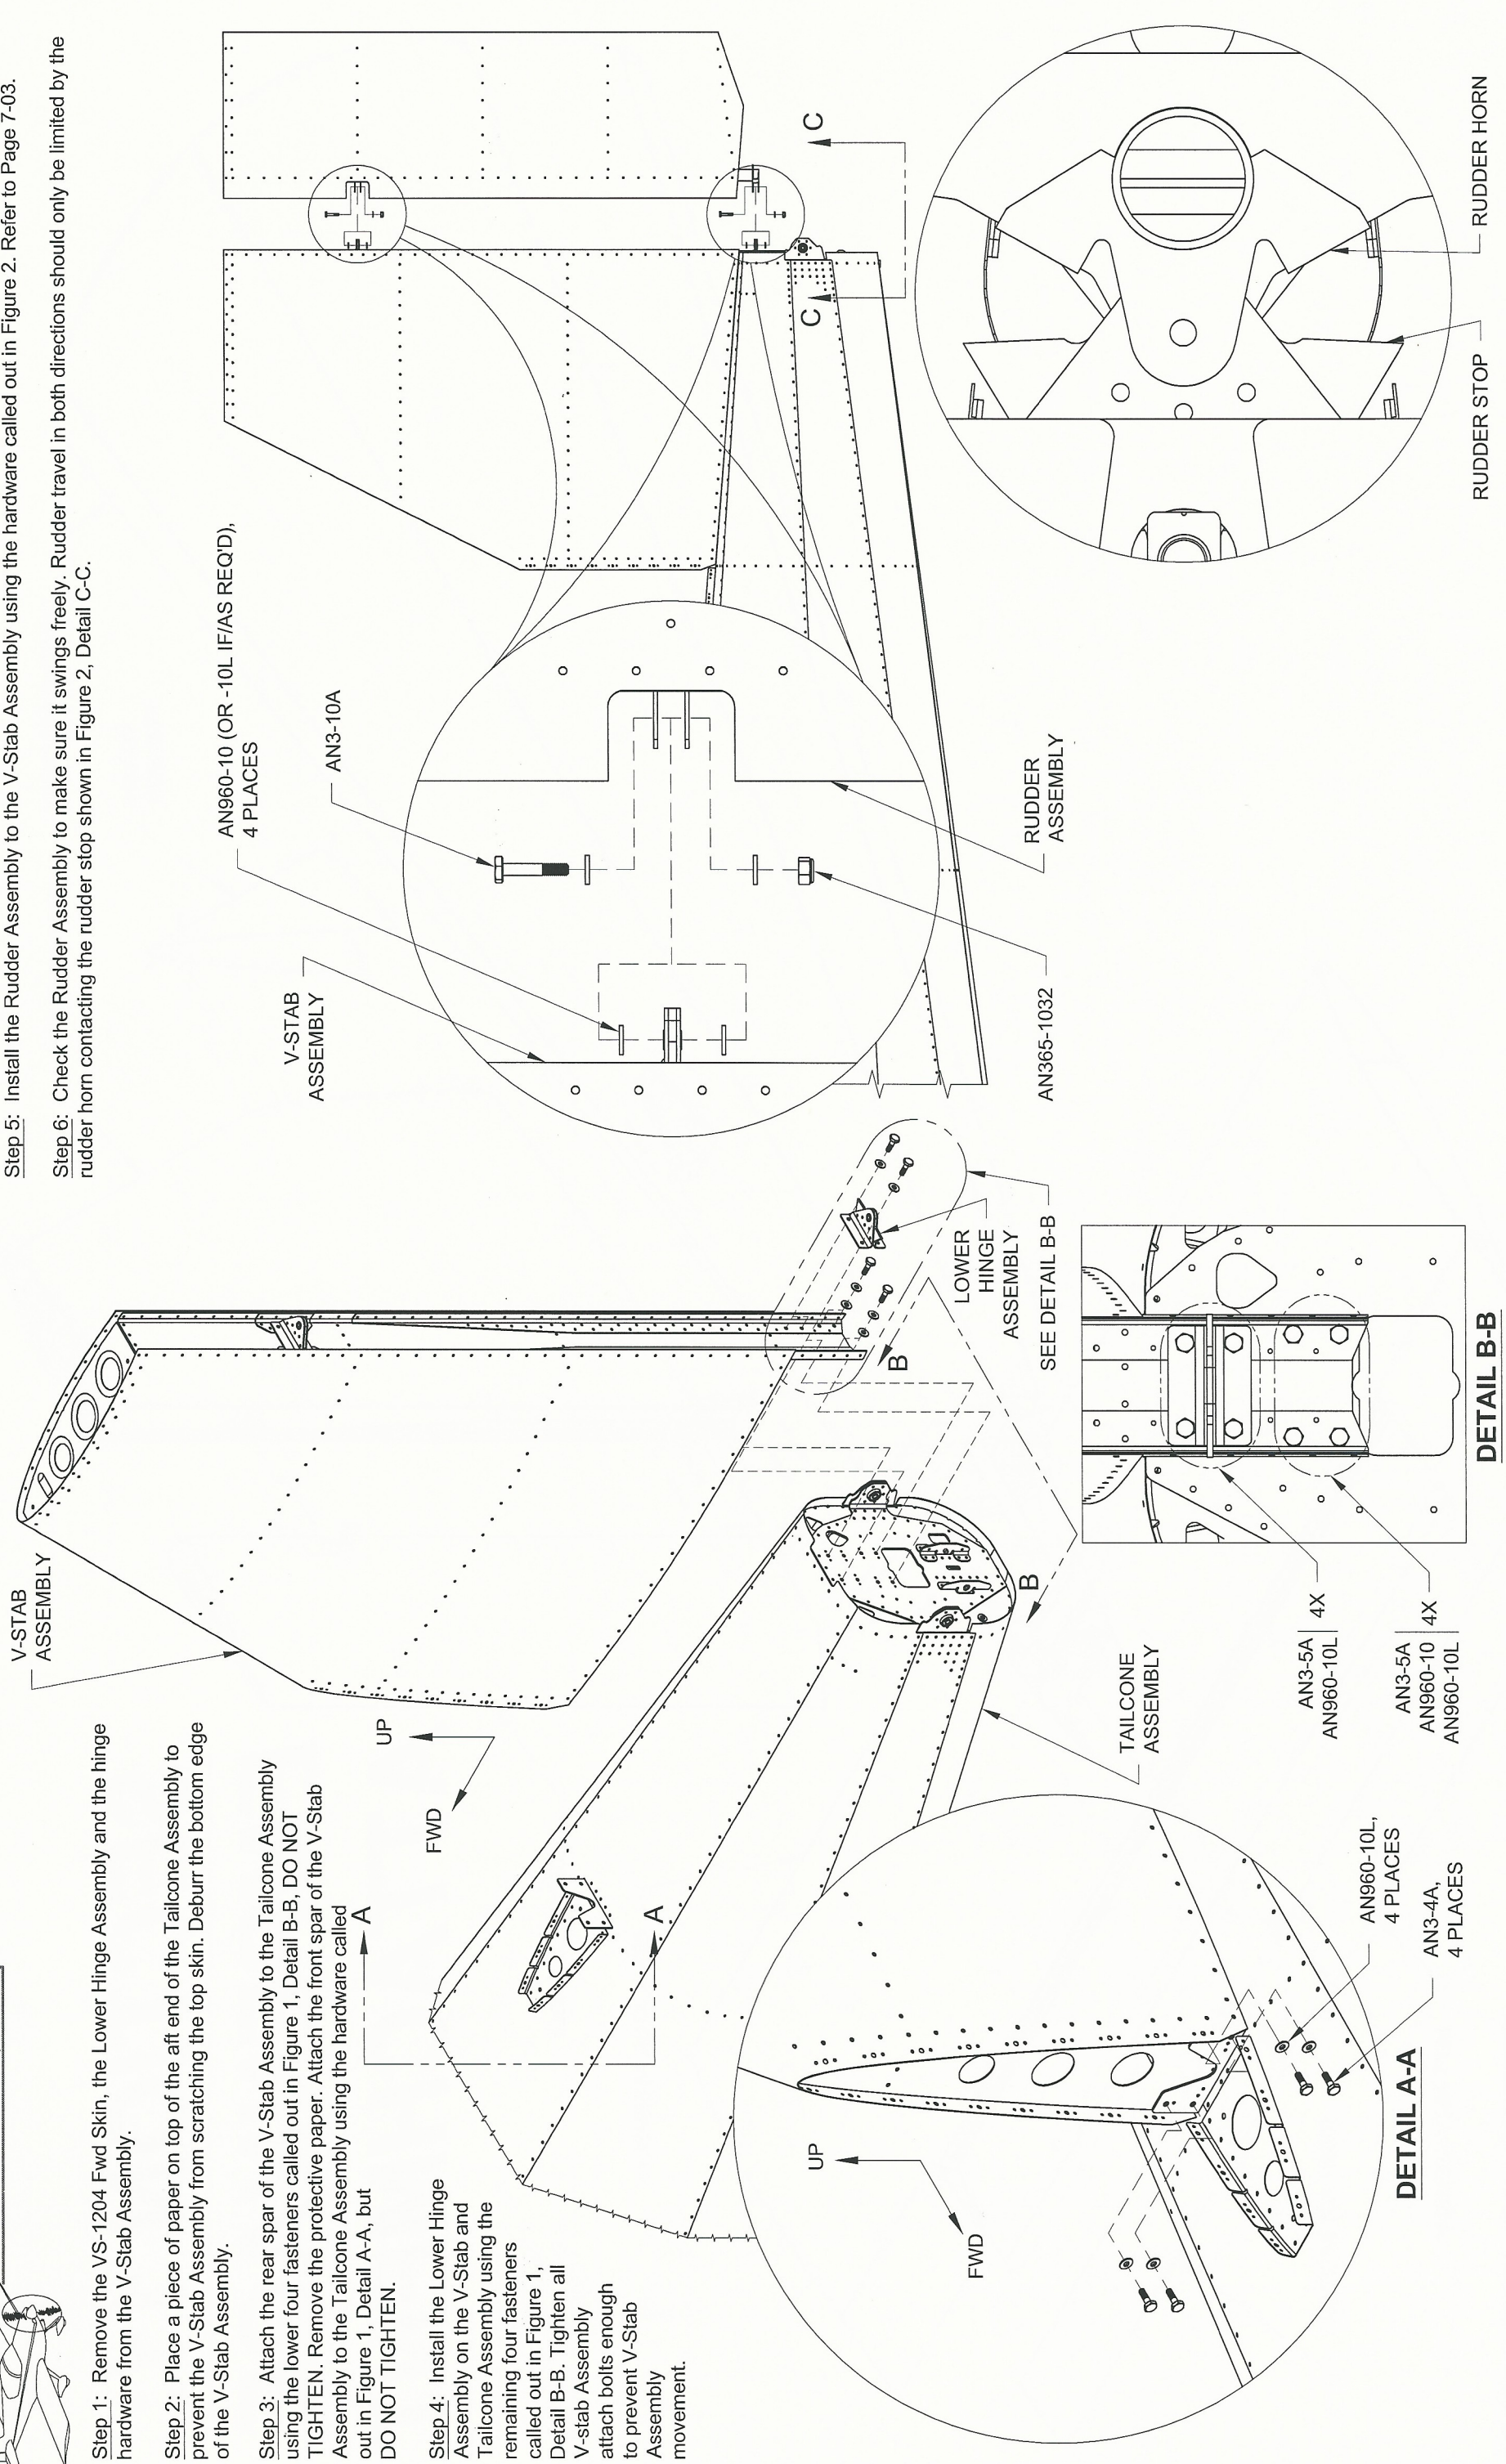


Step 5: Install the Rudder Assembly using the hardware called out in Figure 2. Refer to Page 7-03.

Step 6: Check the Rudder Assembly to make sure it swings freely. Rudder travel in both directions should only be limited by the rudder horn contacting the rudder stop shown in Figure 2, Detail C-C.



**FIGURE 1:**  
V-STAB ASSEMBLY ATTACH

**FIGURE 2:**  
RUDDER ATTACH