



Step 1: Install the VS-1204 Fwd Skin to the V-Stab Assembly and the F-12106 using the hardware called out in Figure 1.

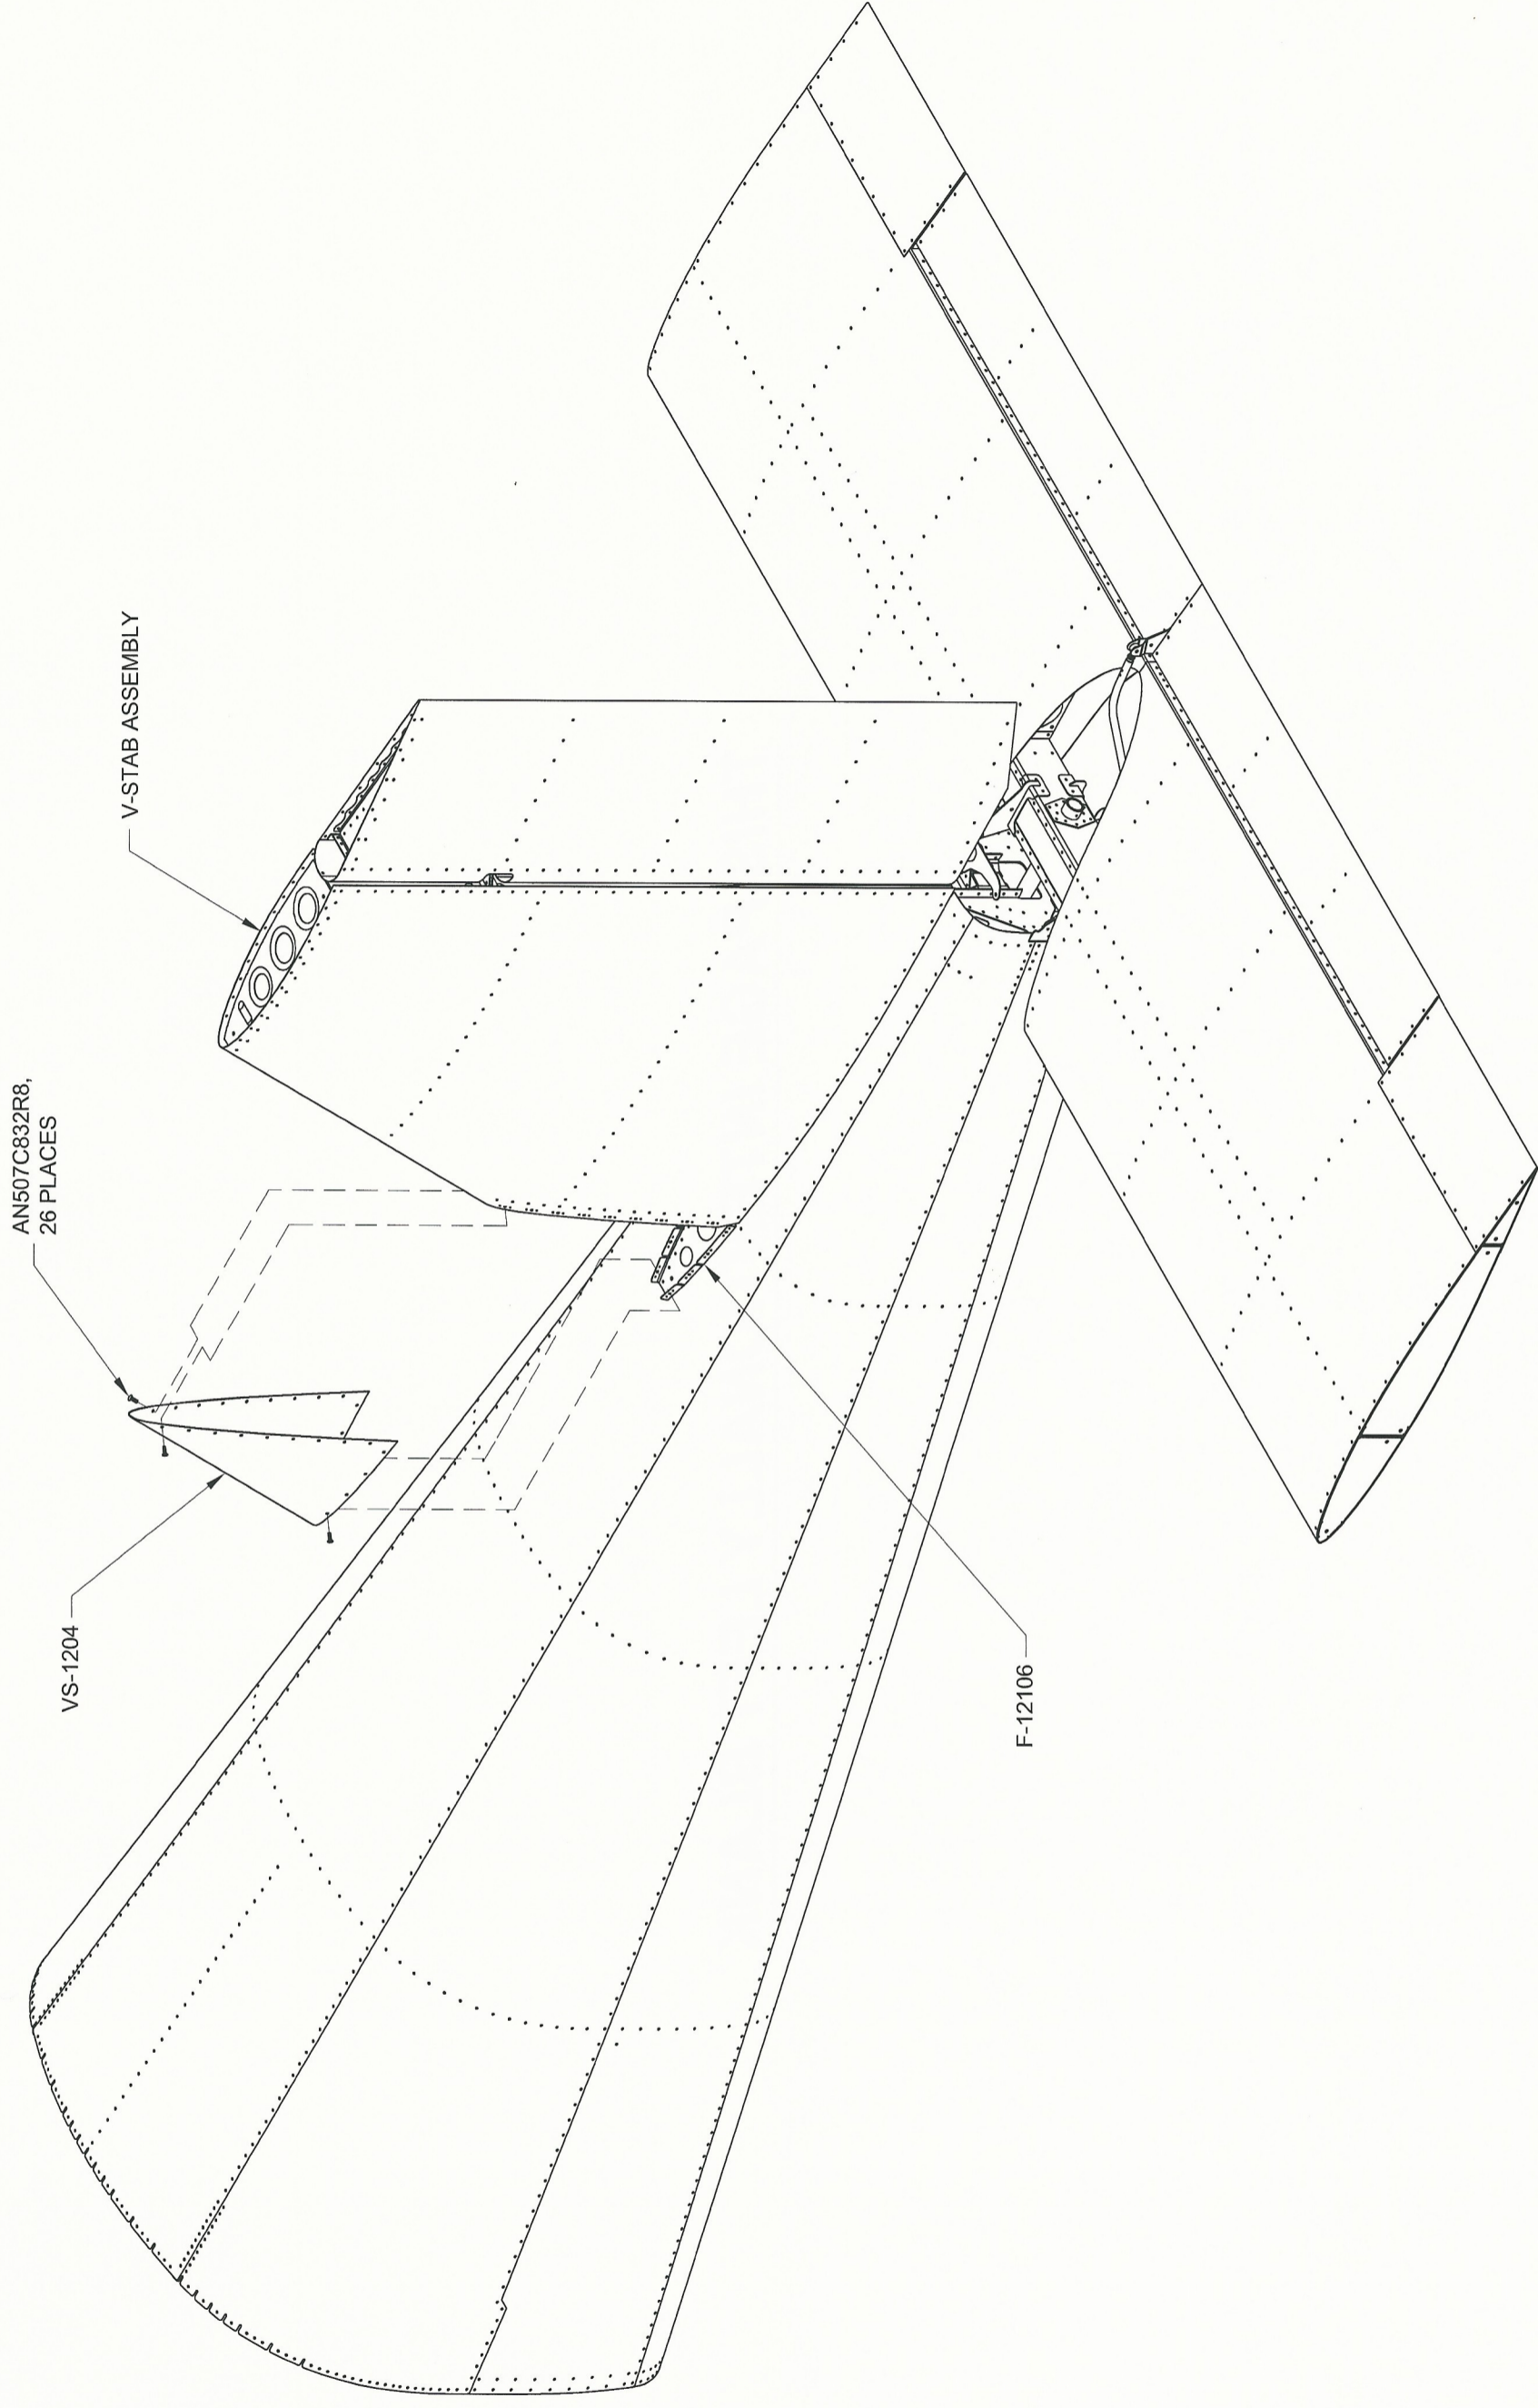


FIGURE 1:
FORWARD SKIN ATTACH