



Step 1: Remove the Rudder Assembly from the V-Stab Assembly.

Step 2: Rivet the VS-1213 V-Stab Tip Fairing to the V-Stab Assembly using the rivets called out in Figure 1.

Step 3: Rivet the R-1206 Rudder Tip Fairing to the Rudder Assembly using the rivets called out in Figure 1.

NOTE: The completion of this section must be postponed until just prior to Section 32 since the F-1294A and F-1294B are shipped in the Finish Kit.

NOTE: For Step 4 refer to Page 11-02.

Step 4: Install the V-Stab Assembly to the Tailcone Assembly.

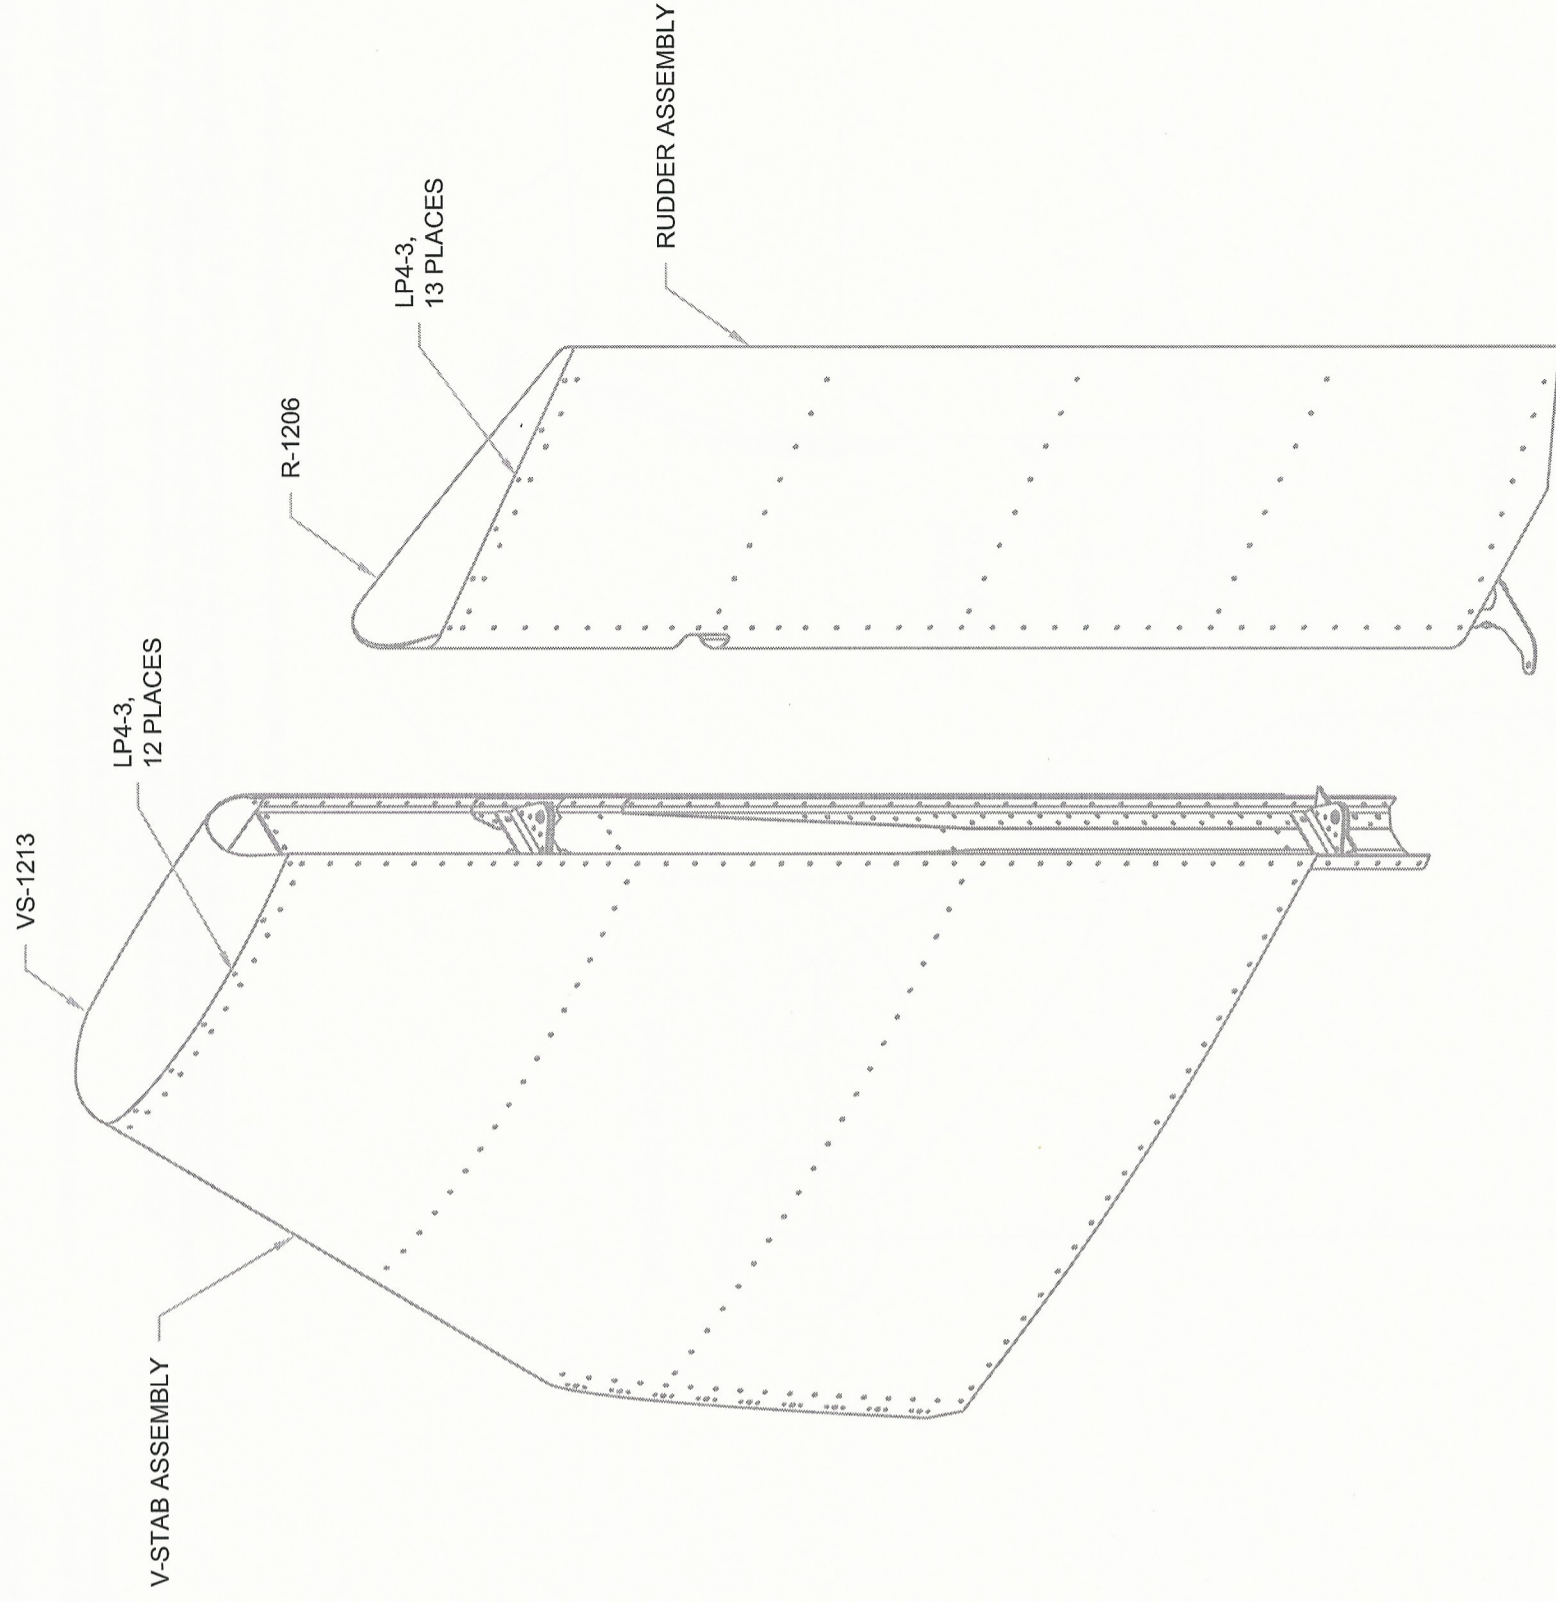


FIGURE 1:
TIP FAIRING INSTALLATION