


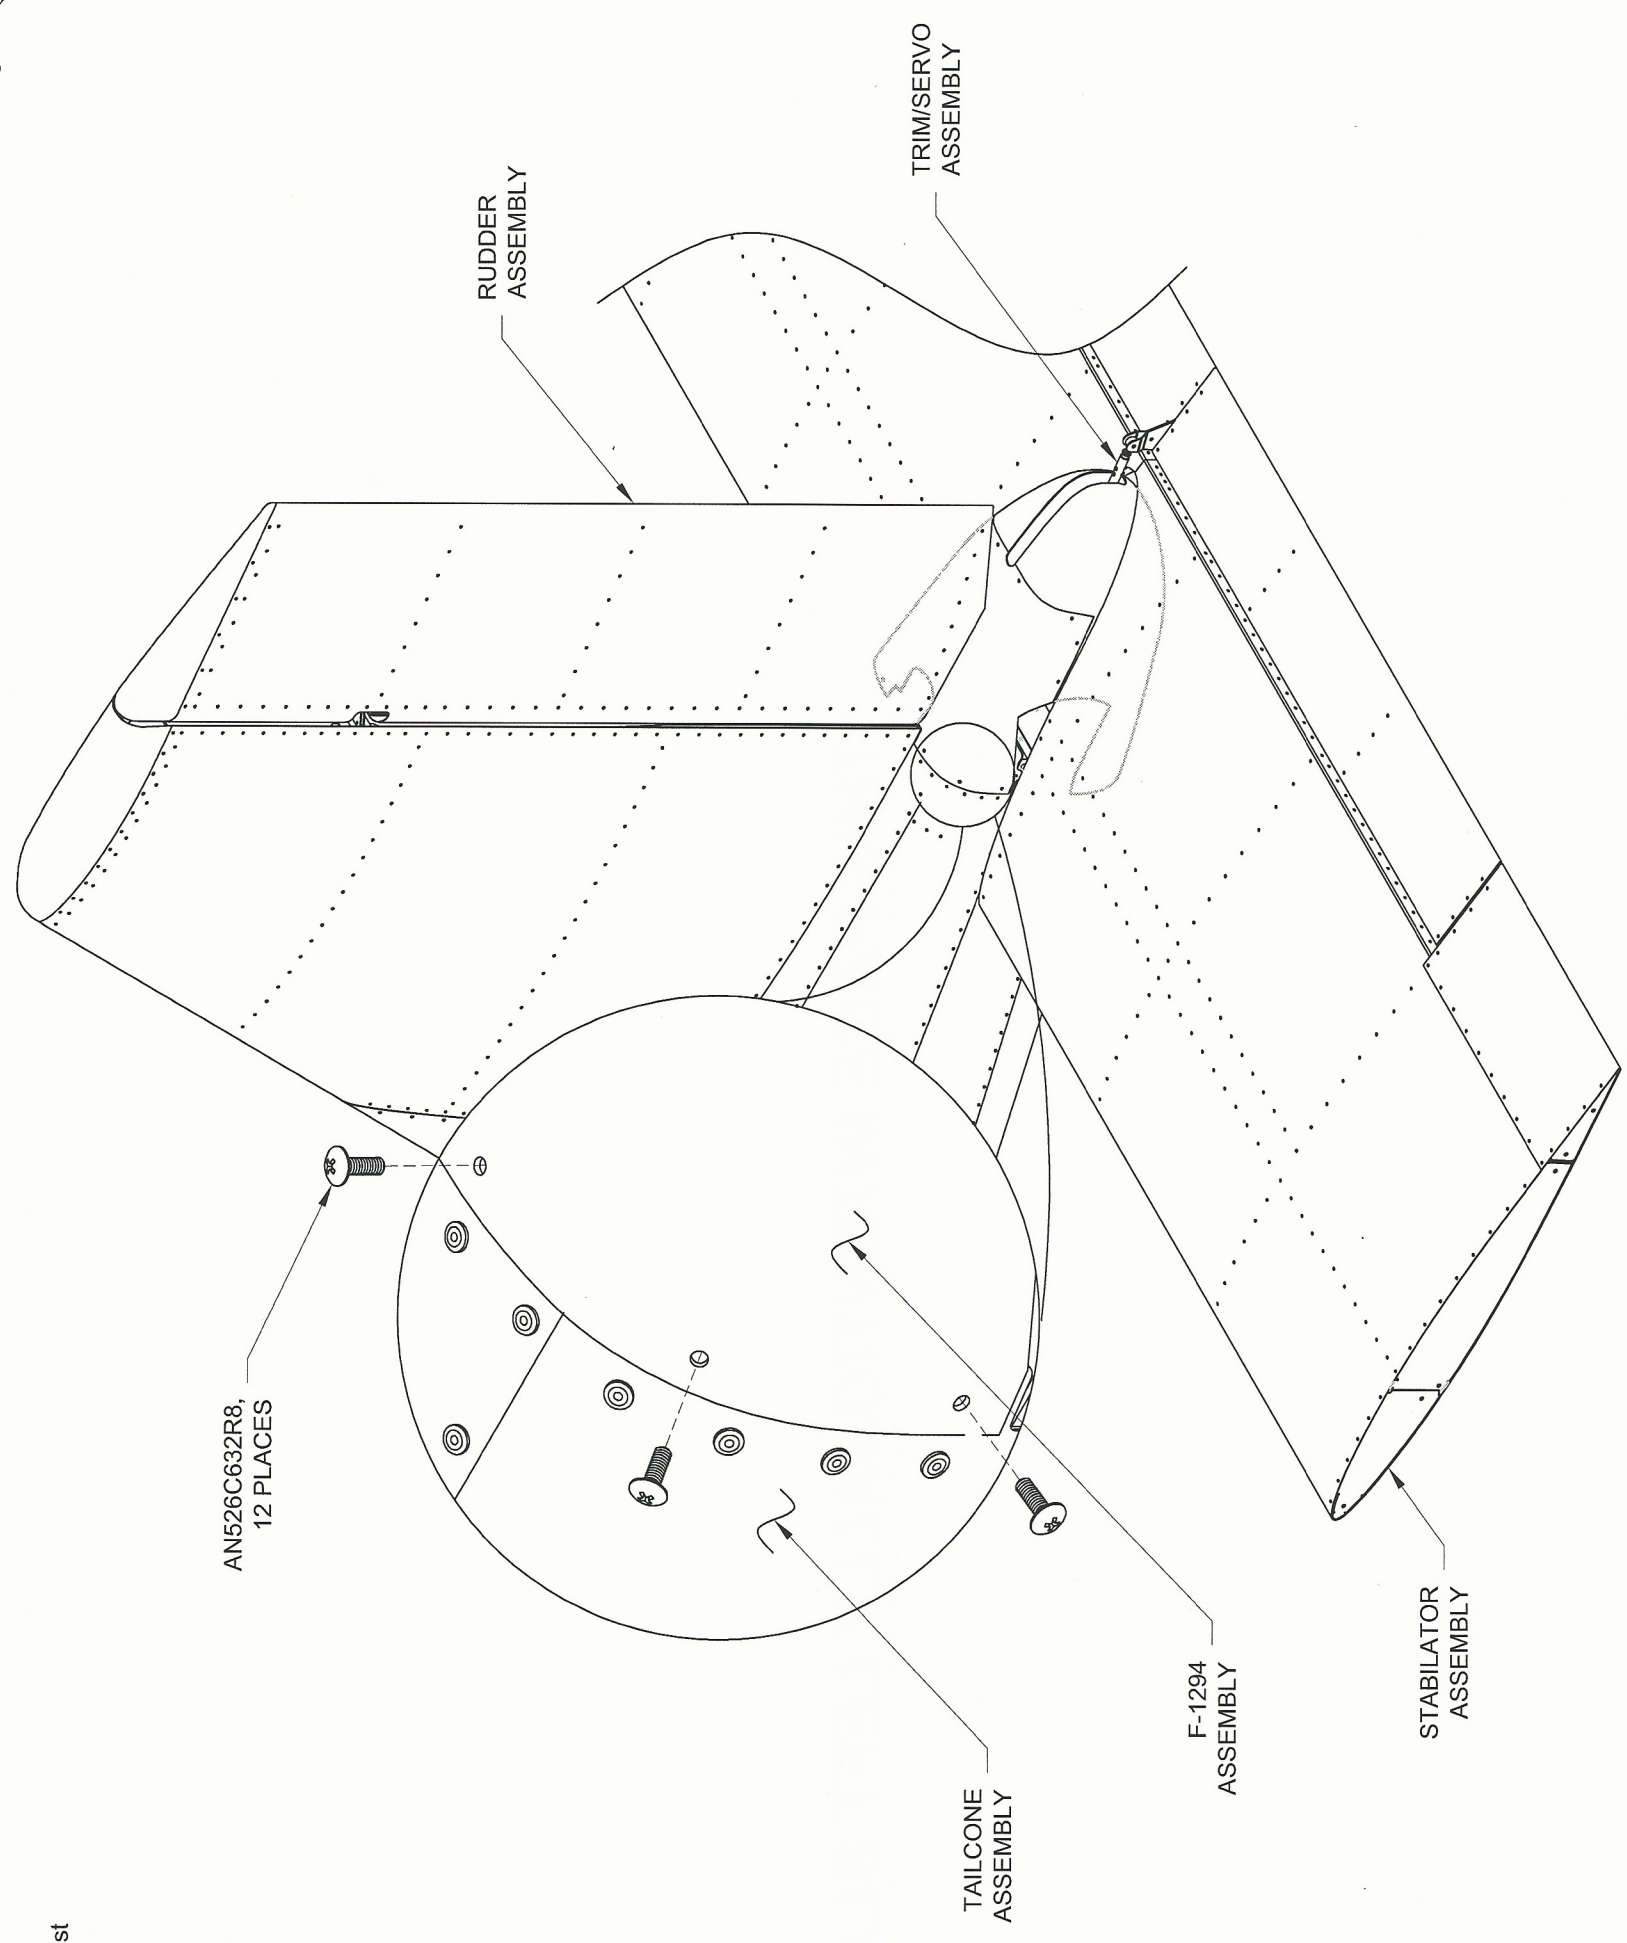

Step 1: Install the F-1294A & B Upper and Lower Tailcone Fairing to the Tailcone Assembly using screws called out in Figure 1.

Step 2: Re-check the clearance throughout the travel of the Rudder, Stabilator and Trim/Servo Assemblies to the F-1294A & B Upper and Lower Tailcone Fairings. At least 1/8 inch of clearance is needed.



**FIGURE 1:**  
FAIRING INSTALLATION