



Step 1: Place a layer of carpet or an old blanket on the work surface. Lay the left wing upside-down on the work surface and position the left flaperon as shown. Attach the left flaperon to the left wing using the hardware called out in Figure 1. Install the A-1211 Pivot Guide as shown in Figure 1.

Step 2: Align the flaperon with the wing and tape the outboard edge of the flaperon to the wingtip using duct tape or similar tape. This will prevent the flaperon from swinging freely as the wing is moved. The flaperon must be secured or held any time the wing is moved after the flaperon is installed. When installing the wings with the flaperons attached, the person at the wingtip may hold the flaperon with one hand to prevent it from swinging freely.

Step 3: Repeat Step 1 and Step 2 for the right wing and flaperon.

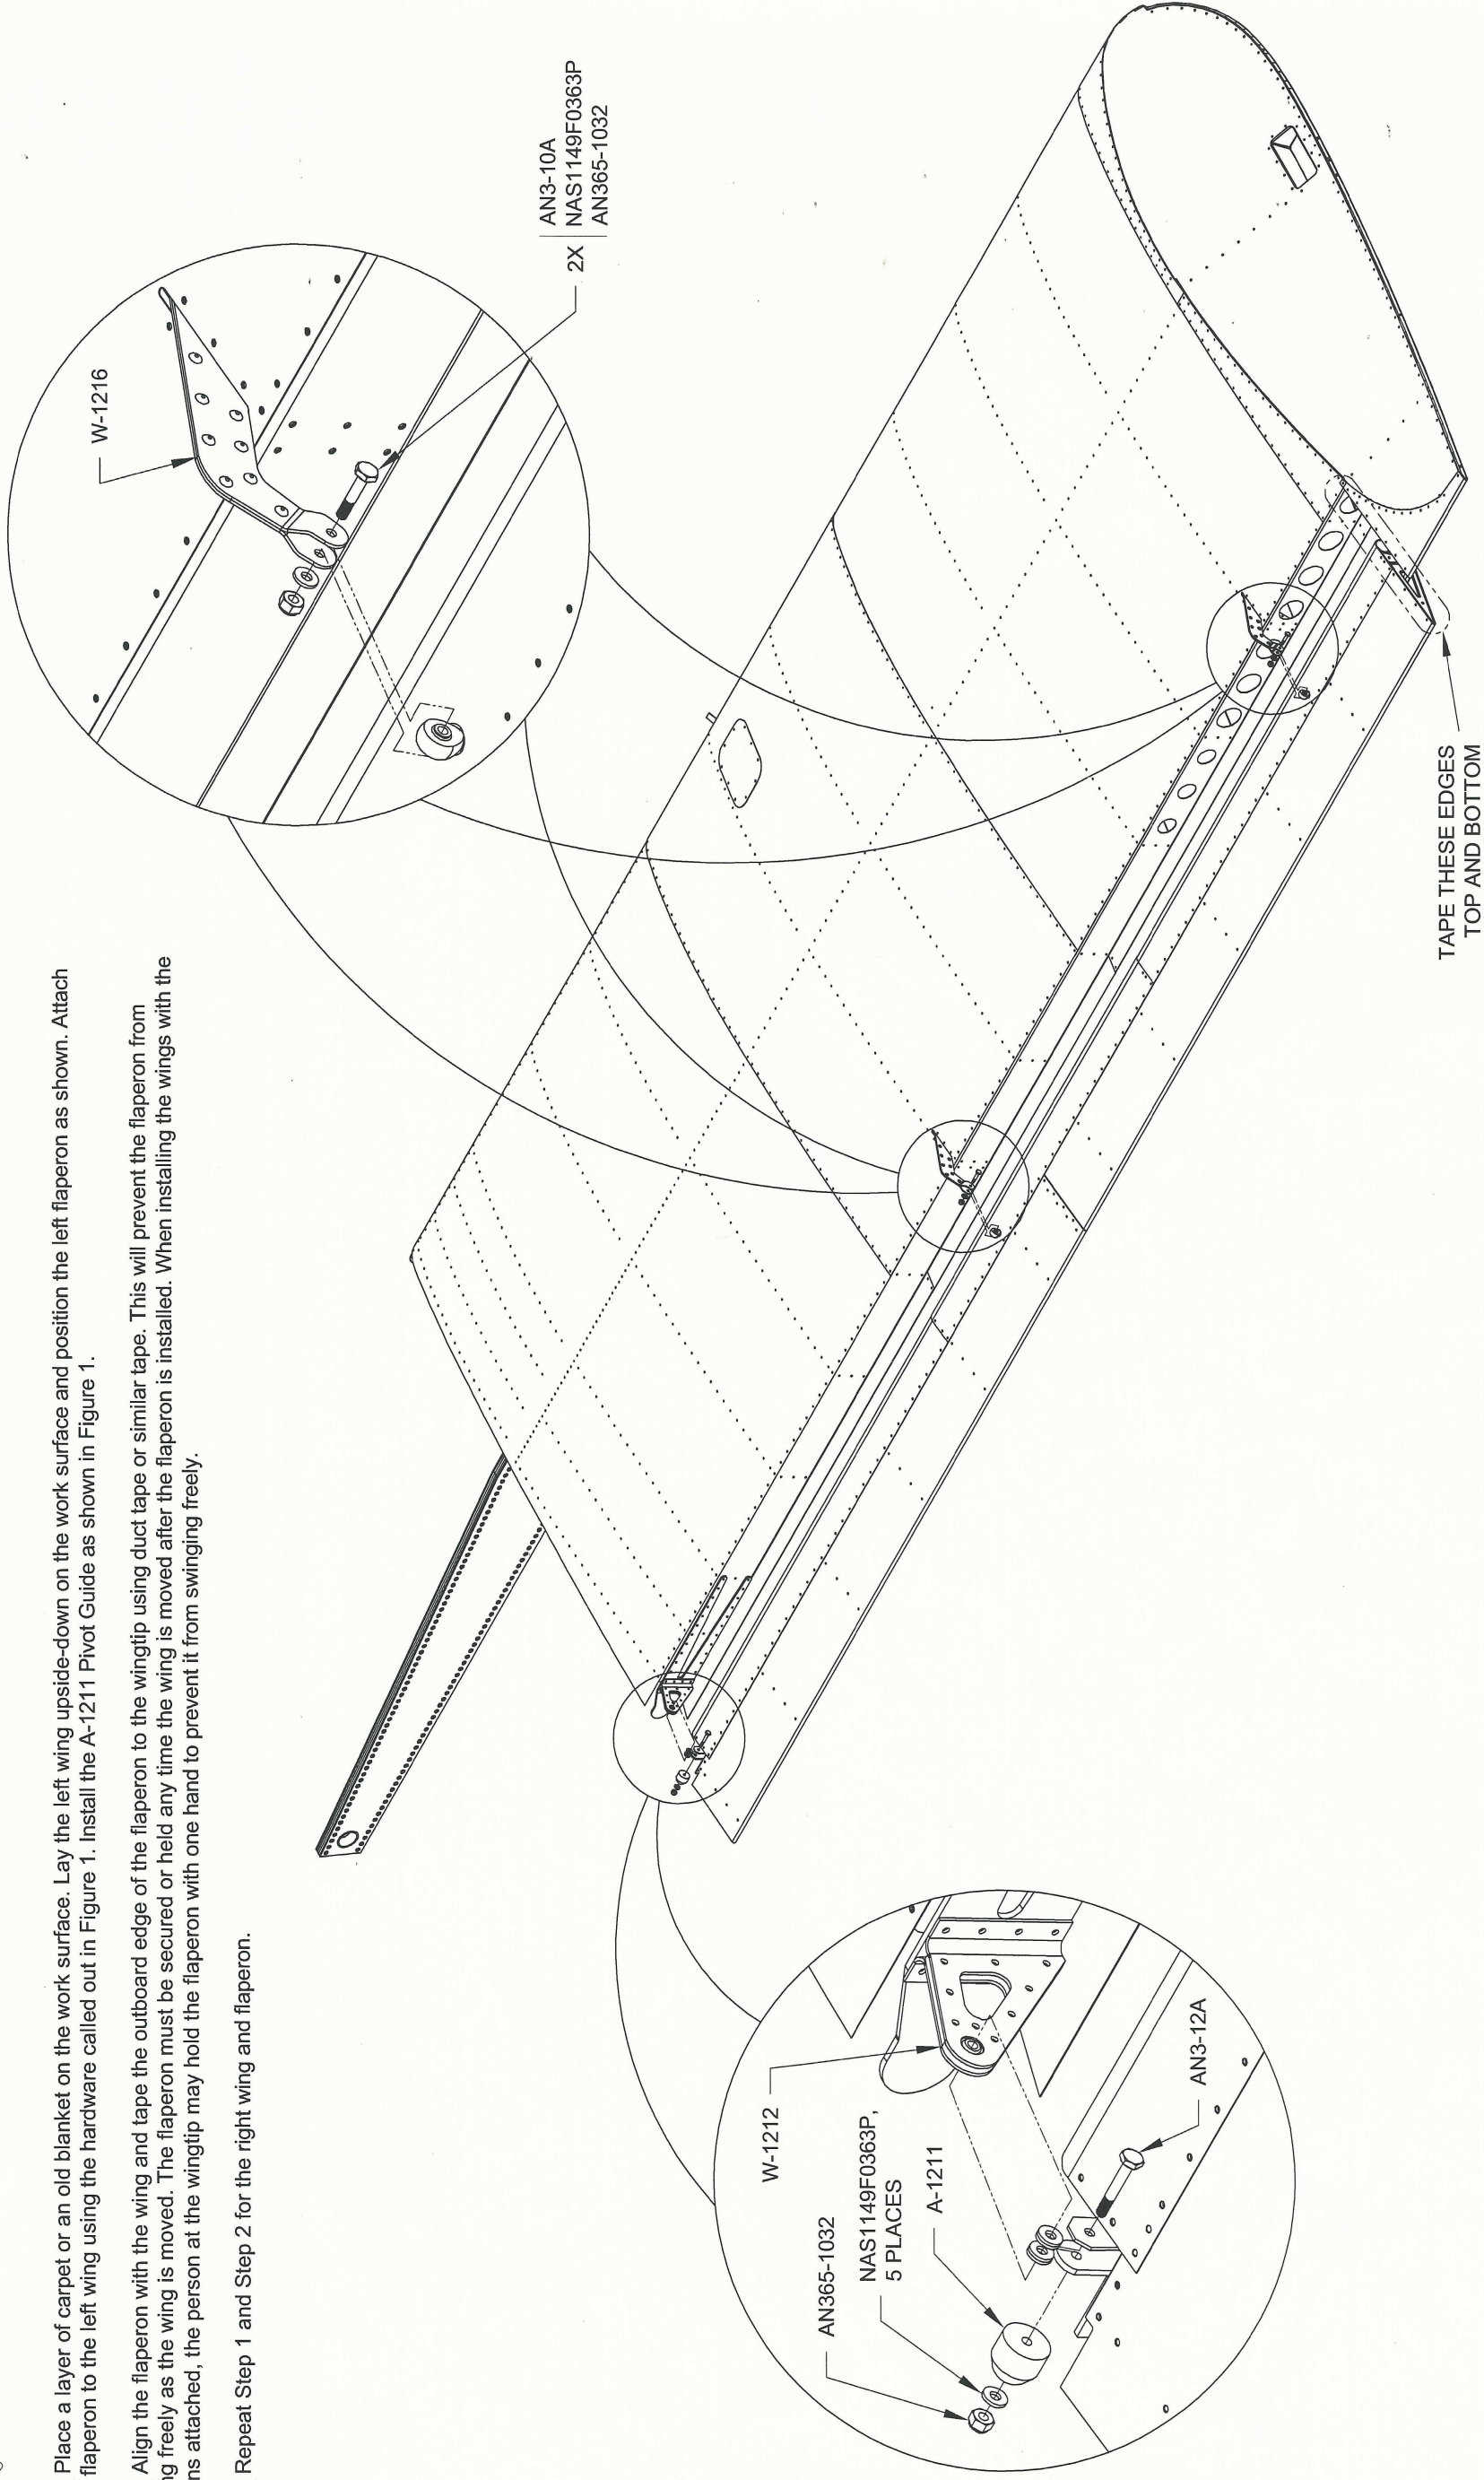


FIGURE 1: FLAPERON INSTALLATION